




490048-V1

INSTRUKCJA OBSŁUGI INSTRUCTIONS FOR USE

©Disney

NIE SPADNIJ, GRA ZRĘCZNOŚCIOWA STITCH DROP

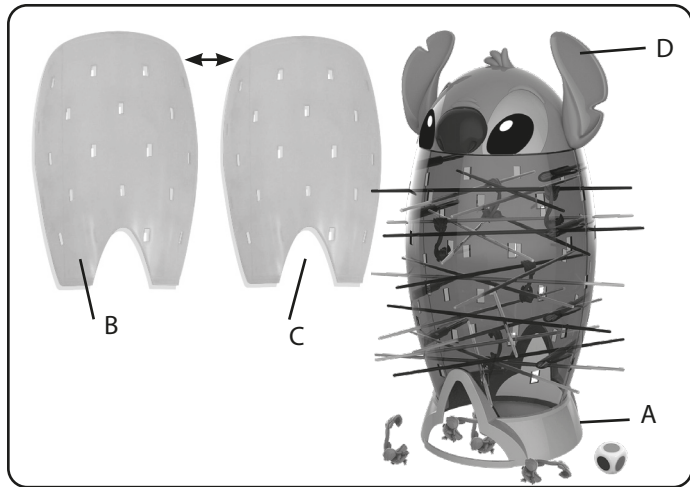

Wyprodukowano w Chinach
Made in China



Producent/Manufacturer:

IMC. TOYS, S.A. • Pare Llaurador, 172 • 08224 Terrassa (Barcelona) SPAIN
NIF: ES A08667370 • www.imctoys.com

IN UK, AUTHORIZED REPRESENTATIVE:

Quality Solutions Limited (IQS. Ltd), Enterprise House, Wrest Park, Silsoe, Bedfordshire, MK45 4HR, UK

Importer/Dystrybutor:

EPEE Polska sp. z o.o. • al. Bohaterów Warszawy 15-16 •
70-370 Szczecin • www.epee.pl

ITEM 490048ST • 170225 • EP60443

PL – POLSKI

NIE SPADNIJ

DZIĘKUJEMY ZA ZAUFANIE

Gra „Nie spadnij” to prosta i emocjonująca rozrywka dla najmłodszych. Dzięki niej dzieci mogą rozwijać zręczność, koncentrację i umiejętność logicznego myślenia, czerpiąc jednocześnie radość z zabawy. Jesteśmy przekonani, że gra dostarczy wielu niezapomnianych chwil i mnóstwo śmiechu. Dziękujemy za zaufanie i życzymy wspaniałej zabawy! A po więcej produktów z naszej oferty zapraszamy na: www.epee.pl

WAŻNE INFORMACJE DLA DOROSŁYCH

Gra jest przeznaczona dla 2 do 4 graczy od trzeciego roku życia. Aby poprawnie złożyć elementy gry, zalecana jest pomoc osoby dorosłej. Przed przekazaniem gry dzieciom usuń opakowanie i wszystkie jego elementy, zabezpieczające produkt podczas transportu.

OPIS PRODUKTU

ZAWARTOŚĆ OPAKOWANIA:

- 1 pojemnik (obszar gry)
- 30 figurek
- 30 patyczków w trzech kolorach (po 10 w każdym kolorze)
- 1 kostka do gry

MONTAŻ

(wspomóż się ilustracją)

- Umieść podstawę (A) pojemnika na płaskiej powierzchni odpowiedniej do gry.
- Połącz boki pojemnika (elementy B i C) i umieść je na podstawie (A), upewniając się, że otwory w podstawie pokrywają się z otworami w ścianach.
- Na górze pojemnika umieść pokrywę (D).

PRZYGOTOWANIE DO GRY

- Włóż na każdym poziomie pojemnika 6 do 8 losowych patyczków. W tym celu, wsuń końcówkę patyczka w otwór w pojemniku i pchnij go w stronę innego otworu na tym samym poziomie. Kontynuuj do momentu wykorzystania wszystkich patyczków. UWAGA: Jeśli chcesz uczynić grę łatwiejszą, zadbaj o to, by na danym poziomie znalazło się po tyle samo patyczków z każdego wybranego koloru.
- Zdejmij pokrywę (D) i wrzuc wszystkie figurki do pojemnika. Jeśli jakieś figurki spadną na sam dół, zbierz je i ponownie wrzuc do pojemnika. Docelowo, każda z nich powinna opierać się na patyczkach.
- Nałóż z powrotem pokrywę.

CEL GRY

Celem gry jest wyciąganie patyczków w kolorze wskazanym przez kostkę w taki sposób, aby figurki nie spadały na dno pojemnika. Wygrywa gracz, który na koniec gry ma najmniej figurek.

ZASADY GRY

Grę rozpoczyna najmłodszy gracz. Potem rozgrywka przebiega zgodnie z ruchem wskazówek zegara.

W swojej turze:

- Rzuci kostką.
- Wyciągnij z pojemnika jeden patyczek w kolorze wskazanym przez kostkę.

WAŻNE: Kolejność wyciągania patyczków zawsze przebiega od najwyższego poziomu do najniższego. Jeśli na tym samym poziomie znajduje się więcej niż jeden patyczek w wylosowanym kolorze, Ty decydujesz, który z nich wyciągnąć. Jeśli w pojemniku nie ma już patyczka w wylosowanym przez Ciebie kolorze, Twoja tura się kończy i przechodzi do następnego gracza.

- Bądź ostrożny! Jeśli w Twojej turze na dno pojemnika spadną jakieś figurki, będziesz musiał je zebrać do swojej puli.

Gra toczy się do momentu, w którym w pojemniku nie będzie już żadnych figurek. Wygrywa gracz, który zebrał ich najmniej.

PO ZAKOŃCZENIU GRY

Po skończonej zabawie, rozłóż pojemnik na części, a następnie umieść wszystkie elementy gry w opakowaniu, tak aby nie uległy zniszczeniu lub się nie pogubiły.

CZYSZCZENIE

W razie potrzeby produkt można wyczyścić lekko wilgotną ściereczką, a następnie osuszyć. Nie stosuj detergentów ani rozpuszczalników.

UWAGI DOTYCZĄCE BEZPIECZNEGO UŻYTKOWANIA PRODUKTU

OSTRZEŻENIE! Nieodpowiednie dla dzieci w wieku poniżej 3 lat, ze względu na drobne elementy łatwe do połknięcia – ryzyko udławienia. W przypadku połknięcia niezwłocznie skontaktować się z lekarzem. Nie przykładaj patyczków z zestawu do oczu, nie wkładaj do buzi, nosa czy uszu. Należy zachować opakowanie, etykiety lub ulotki, na których zamieszczone są informacje o zabawce. Przed podaniem zabawki dziecku należy usunąć opakowanie i wszystkie plastikowe zaczepy. Kolory i kształty mogą się nieznacznie różnić od tych pokazanych na opakowaniu.

ZALECENIA DOTYCZĄCE ODPOWIEDZIALNEGO UŻYTKOWANIA I OCHRONY ŚRODOWISKA

- Opakowania transportowe (karton, plastik itp.) wrzucaj do odpowiednich pojemników do recyklingu.
- Jeśli gra nadal jest sprawna, ale nie chcesz już jej używać, nie wyrzucaj jej. Poszukaj organizacji lub instytucji, które mogłyby ją przekazać innym dzieciom.

EN – ENGLISH

STITCH DROP

DIRECTIONS FOR USE

IMC's board games are easy to use and operate. We are certain that they will provide your children with many enjoyable moments. We thank you for the trust you have shown in us by purchasing one of our products. Please visit our website to view our extensive catalogue of products: www.imctoys.com

IMPORTANT INFORMATION NOTE FOR ADULTS

Game for 2 or 4 players. Recommended for children aged 3 and over. To assemble the toy correctly, the supervision or assistance of an adult is recommended. Remove all plastic elements, wires and objects used to secure the product during transport before giving it to children.

PRODUCT CHARACTERISTICS

Contents:

- 1 container or game area.
- 30 figures.
- 30 plastic rods of different colours (10 of each colour).
- 1 dice.

Assembly (use the illustration as a guide for assembling it).

- Place the base (A) of the container on a flat surface that is suitable for playing on.
- Then join the sides of the container (pieces B and C) and place the assembly on piece A making sure that the openings on the base coincide with those of the container.
- The deck or part (D) is fitted on the top part of the container.

Preparation

- Insert 6 to 8 rods at random in the container, by levels (to make the game easier to play, try to maintain an equal proportion of colours at each level). To do this, pass the end of the rod through one of the holes until the rod reaches another hole at the same level. The rod must remain stable. Do the same with the other rods and continue doing this for each of the different levels. One rod can coincide with another rod in the same hole.
- Remove part D or the top deck of the container and drop all the figures inside it.
- If any of the figures fall to the bottom, pick them up and drop them inside again until all the figures are fixed to a rod.
- Replace the container lid.

Objective

To remove the rod with the colour indicated by the dice and prevent the figures from falling to the bottom of the container. The player with the fewest figures left is the winner.

Game

The youngest player goes first. That player throws the dice. Depending on the colour shown by the dice, the player must remove the rod with that colour that is in the highest position. If there is more than one rod with that colour at the same height, the player can decide which one he wants to remove. Be careful! If any of the figures fall to the bottom of the container, you must pick them up and add them to the ones you already have. If the dice indicates a colour and no more rods in that colour remain in the container, this is an advantage as your turn passes to the player on your left. Each player must throw the dice and remove the rods until there are no figures left in the container. The player with the lowest number of dropped figures wins the game.

After the game

Dismantle all the pieces that were previously assembled and use the box to store and conserve the product correctly.

MAINTENANCE

If necessary, use a slightly dampened cloth to clean the product and then dry it immediately with a dry cloth. Do not use detergents or solvents.

SAFETY

WARNINGS!

- Warning. Not suitable for children under 3 years of age. It contains small parts which might be ingested by them. Choking hazard.
- Please keep the packaging for future reference as it contains very important information.
- Please note that due to technical improvements this product may differ from the one that appears in the illustration.
- Read the instructions before use, follow them and keep them for reference.
- Remove all elements designed to fasten and protect the product during transport before giving it to children (plastic pieces, labels, wires, etc.).

RECOMMENDATIONS FOR RESPONSIBLE USE AND FOR PROTECTING THE ENVIRONMENT

Put all the transport packaging, cardboard, plastic, etc. in the recycling containers in your neighbourhood. If you no longer want the toy and it still works, do not throw it away. Remember that other people can still enjoy it, and find bodies or associations that can give it to them. You must not throw the product away in a rubbish bin when it is no longer any use. Use your community recycling services. Products labelled with the WEEE symbol (a crossed-out rubbish bin) indicate that the end user must not throw the product away and that it must be taken to a recycling point for electrical and electronic devices. Use rechargeable batteries whenever possible. Remember to remove the batteries if you are not going to be using it again for a long time. Consult the symbol on the product, in the user manual or on the packaging for more information. The materials are recyclable in accordance with their markings. If you recycle materials or find ways to reuse old devices, you make a considerable contribution to protecting the environment. Please consult the nearest recycling centre or local authorities.

Jeśli masz dodatkowe pytania, skontaktuj się z autoryzowanym dystrybutorem.

If you have a claim, please contact the authorised distributor.